

128G双面铜版纸，骑马钉印刷，英文在前，  
中文在后，单页尺寸105\*148.5mm

 
名称：BTB12产品说明书

料号：6.4.04009.005.01



# Tank Bag User Manual

Model: BTB12BK

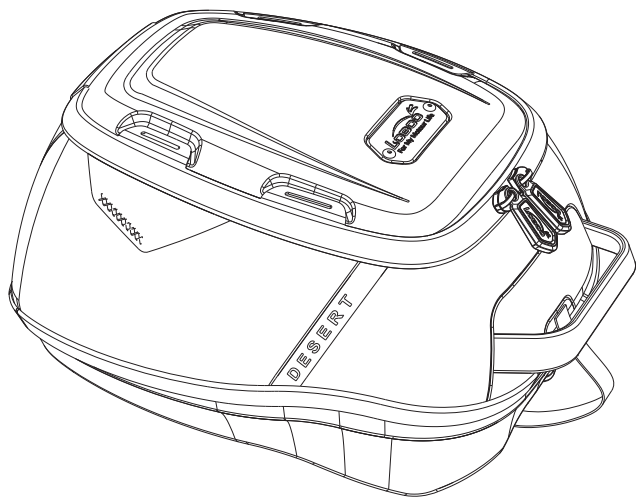

Please read the user manual and related after-sales service terms before use. Incorrect installation and usage may damage the product, significantly impact vehicle safety, and result in the loss of applicable warranty services.



Scan QR code to watch the installation video

## Parameter

Model: BTB12BK



Capacity: 10L

Appearance size: Length340mm/13.39in \* Width260mm/10.24in \*

 
Height190mm/7.48in

Material: nylon, EVA, polyurethane

## Accessories List



| Serial Number | Name       | Diagram   | Quantities | Notes |
|---------------|------------|---|------------|-------|
| ①             | Tank Bag   |  | 1 piece    |       |
| ②             | Rain Cover |  | 1 piece    |       |

## Product Details


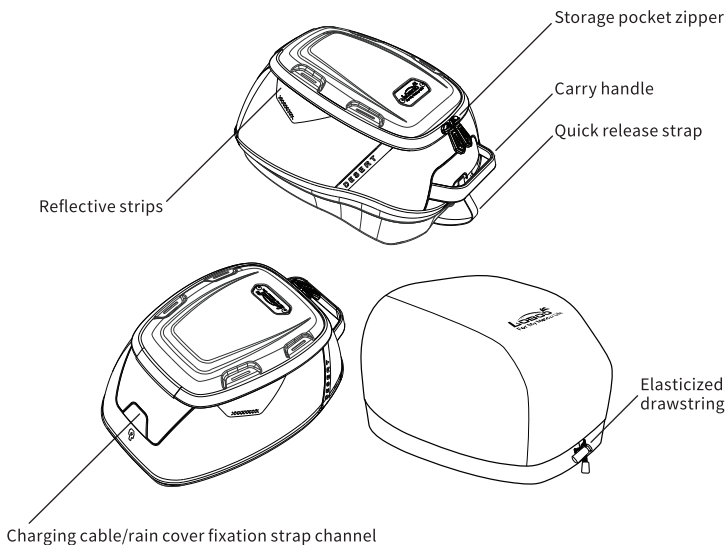


## Rain Cover

  1. With the rain cover facing upwards, insert the rain cover fixation strap buckle through the rain cover fixation strap channel, connecting it with the quick-release buckle inside the bag.

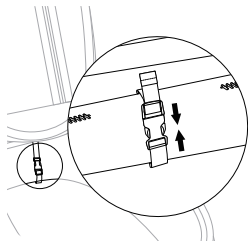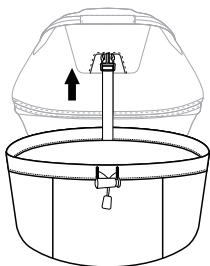


  2. Cover the tank bag with the rain cover and tighten the elastic drawstrings.

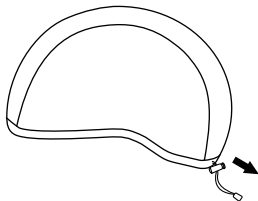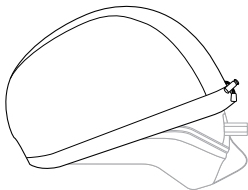


## Tank Bag Base

 1. Adjustment method: Pull up the securing buckle, push the magnetic bag base forward or backward to adjust to the right position, then press the fixed buckle to fasten it.

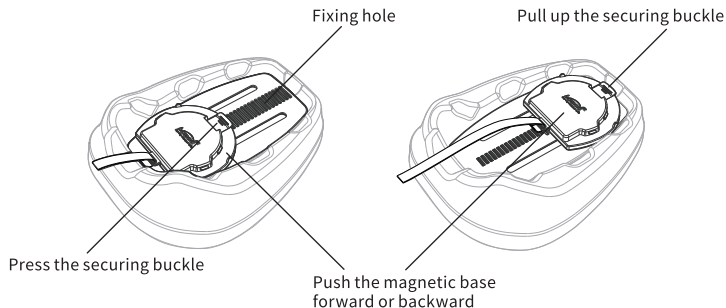


 2. The quick-release tank bag base of the tank bag can be adjusted forward and backward, with an adjustment range of 110mm between the front and rear fixing holes. After adjusting it to the desired position, tighten the quick-release strap to the appropriate location.

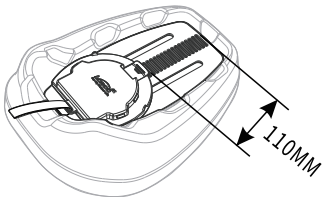


## Tank Bag

 
1. Install the tank bag ring onto the motorcycle fuel tank cap. For the installation method, see the instructions for the motorcycle universal tank bag ring. (Different models have different installation methods of the tank bag ring)

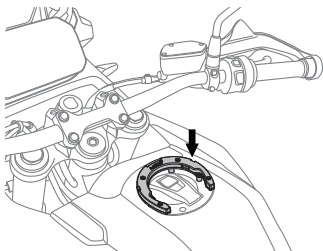

 
2. Secure the tank bag onto the tank bag ring with the quick release base, and ensure that it is properly aligned.

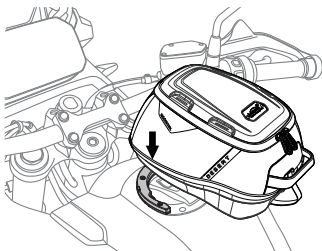

 3. After the tank bag is installed, make sure to check the normal steering of the motorcycle handlebar. If the steering is affected by the tank bag, please refer to the manual, and remove the tank bag to re-adjust the quick-release base to a more suitable position.

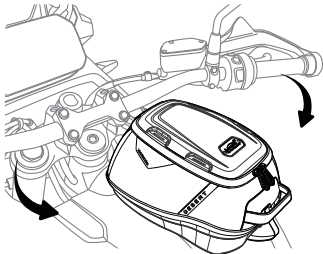

 4. Pull the quick-release base strap to remove the tank bag.

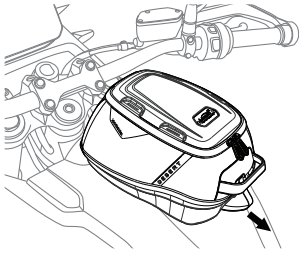


## Precautions for Use

1. Please check if the product is properly installed on the motorcycle tank before riding to avoid the product falling off during the ride and causing property damage.
2. Please use a damp towel or soft bristle brush tool to clean it (do not use bleach, fabric softener, or other acidic or alkaline cleaners). Do not machine wash, iron, dry clean, or use any form of heat to dry the product. Let it air dry naturally and do not expose it to direct sunlight for an extended period of time.
3. When not in use for a long time, store the product in a dry, cool environment to prevent mold damage and periodically clean the surface to remove dust and dirt and extend its service life.
4. Check the product functionality before using. Do not use insecticides on the product surface when using it in harsh outdoor environments. Please avoid using sharp objects to scratch the product fabric during use, which may affect its performance.

## Reversing Installation Instructions for Tank Bag Base

 1. Use a Phillips screwdriver to remove the six cross tapping screws and nuts on the inner liner of the tank bag.

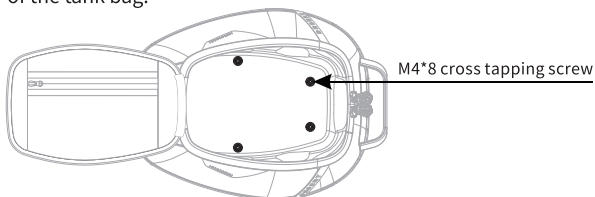


2. Switch the quick-release base's head and tail.


Normal Installation

Tank Bag Base Reversal Diagram

 Reversal Installation

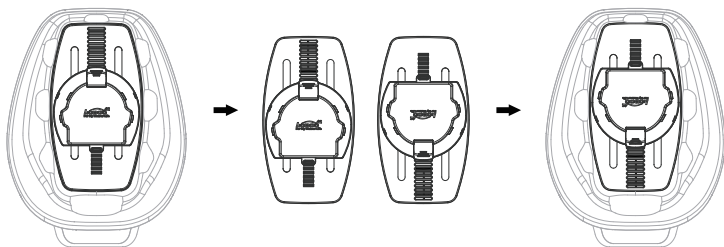

 3. Six fixed points on the reverse side of the bag base, align the six holes at the bottom of the tank bag, use the cross self-tapping screws and nuts at the inner liner of the tank bag to install the bag base back on the tank bag.

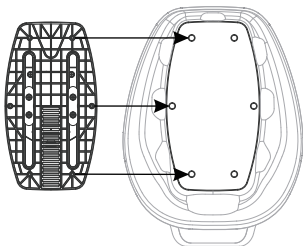



# Warranty Card



Please read this after-sales service guarantee card carefully. If you cannot accept it, please contact the dealer for return and exchange in time. Installation and use means acceptance of this after-sales service term.

## After-sales Service Terms

1. One-year free warranty period, this product can enjoy free repair service within one year from the date of sale if there are quality problems under normal circumstances.
2. Limited warranty: After the one-year warranty period expires, LOBOO will provide paid warranty service, the cost is based on the actual replacement material cost, and no labor cost is charged separately.

## Free warranty service does not include the following

1. No warranty card or cannot provide valid purchase proof.
2. Improper installation, use, man-made or accidental damage, self-disassembly, self-modification and repair, etc.

## Return and Exchange Information

Platform ID: \_\_\_\_\_ Order Number: \_\_\_\_\_

Contact Name: \_\_\_\_\_ Contact Phone: \_\_\_\_\_

Return Address: \_\_\_\_\_

 
## Description

Please keep this card properly and send it back with the product (copy is valid)



# 摩托车通用型油箱包使用说明

款号: BTB12BK

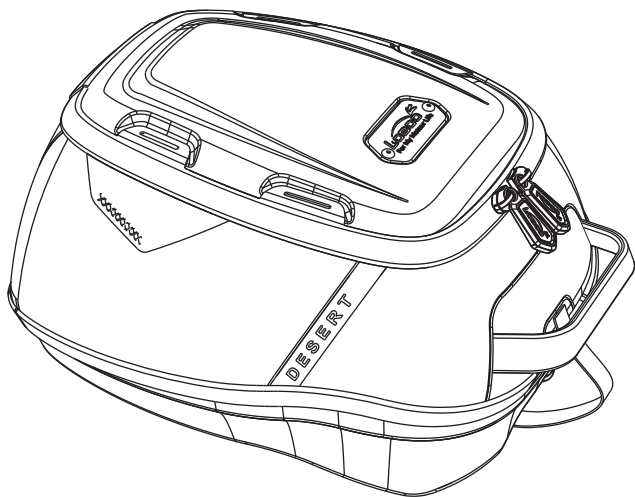

\*使用前请仔细阅读说明书及相关售后服务条款,错误的安装和使用方式会损坏本产品或对安全行车造成重大影响并失去相关的免费保修服务。



扫码观看安装  
使用教程视频

## 产品特性



款号:BTB12BK

容量:10升

 
外观尺寸:长340mm\*宽260mm\*高190mm

材质:尼龙、EVA、聚氨酯

## 配件清单



| 序号 | 名称        | 图例  | 数量 | 备注 |
|----|-----------|---|----|----|
| ①  | 摩托车通用型油箱包 |  | 1个 |    |
| ②  | 防雨罩       |  | 1个 |    |

## 产品功能图示


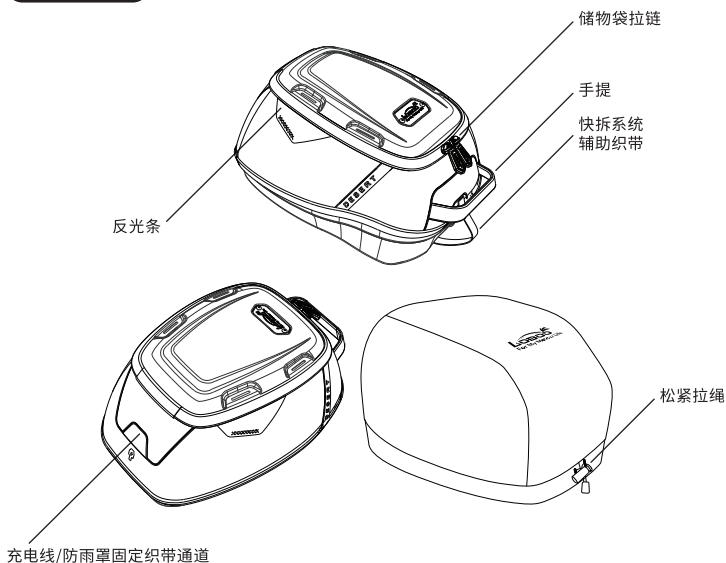


## 摩托车通用型油箱包防雨罩使用说明

  1、防雨罩口朝上，防雨罩固定织带插扣穿入防雨罩固定织带通道，与包内快插扣具连接。

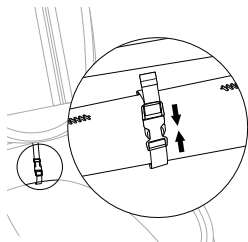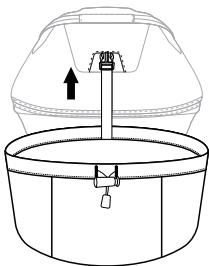


2、防雨罩盖住油箱包，并拉紧松紧抽绳。

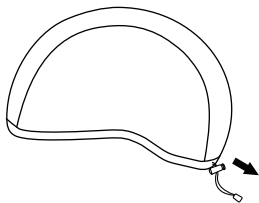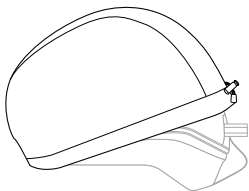  


## 摩托车通用型油箱包底座调节说明

 - 1、调节方式：拉起固定卡扣，向前或向后推动磁吸底座调整至合适位置后，按下固定卡扣扣紧。

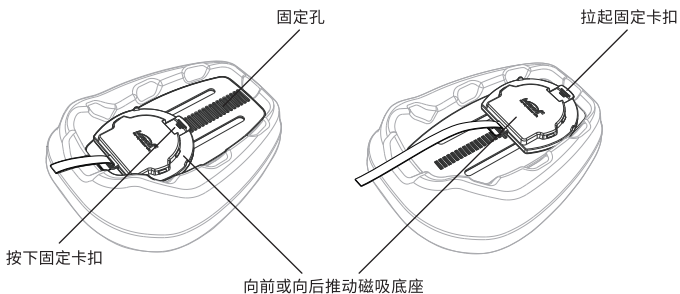


 - 2、油箱包快拆底座前后可调，前后固定孔调节范围110MM，调整至合适位置后，再将快拆系统辅助织带收紧到合适位置。

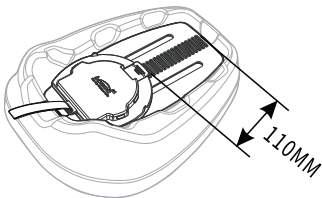


## 摩托车通用型油箱包安装说明

 
- 1、将油箱包转接底座安装到摩托车油箱盖上，安装方式见摩托车通用型油箱包转接底座说明书。（不同车型的转接底座安装方式不同）

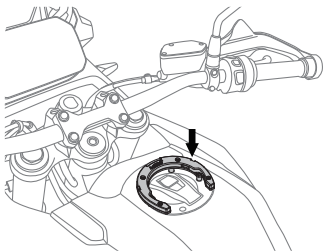


- 2、油箱包利用磁吸底座吸附在油箱包转接底座上，并检查是否安装吻合。

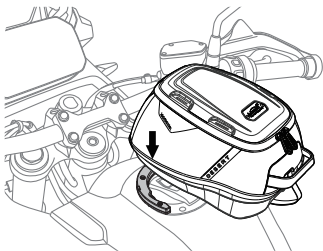 

 - 3、油箱包安装完成后，务必检查摩托车车把的正常转向，如转向受油箱包位置影响，请阅读油箱包底座调节说明，取下油箱包重新调整快拆底座至更合适的位置。

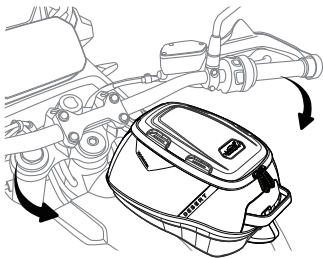

- 4、拉动快拆底座辅助织带，即可快捷取下油箱包。

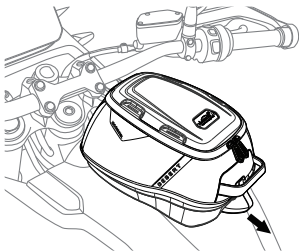 


## 摩托车通用型油箱包注意事项


- 1、骑行前，请检查产品是否正确安装在摩托车的油箱上，避免骑行途中产品脱落，造成财产损失。
- 2、如需清洁产品，请用湿毛巾或软毛刷（勿使用漂白剂、柔顺剂或其他酸碱清洁剂）擦拭去除产品表面污渍，不可机洗、熨烫、干洗以及任何形式的烘干，让其自然晾干，请勿置于阳光下长时间暴晒。
- 3、长时间不使用时，应放置在干燥、阴凉的环境中，避免发霉对产品造成损坏，并定期清洁产品表面的灰尘和污垢，延长使用寿命。
- 4、出行前，请检查产品的功能是否正常，户外恶劣环境使用时，不要在产品表面使用杀虫剂，请避免尖锐物品划伤产品，以免影响产品性能。

## 摩托车通用型油箱包-快拆底座反装说明(特殊车型)

 
- 1、使用十字螺丝刀拆下油箱包内胆上的六颗十字自攻螺丝和螺帽。

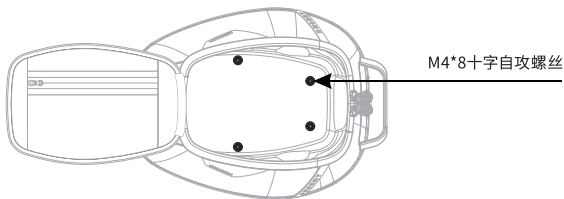

- 2、调换快拆底座头尾。

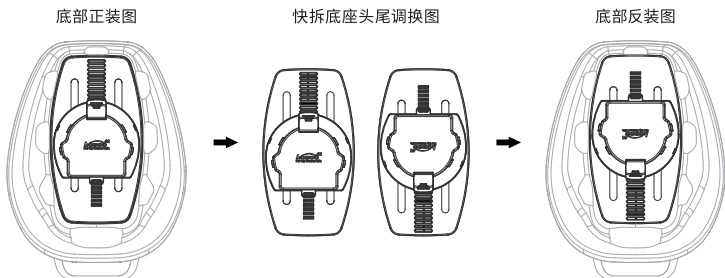 

 - 3、快拆底座反面六点固定位, 对齐油箱包底部六个孔位, 在油箱包内胆处使用十字自攻螺丝和螺帽, 将快拆底座安装回油箱包底部。

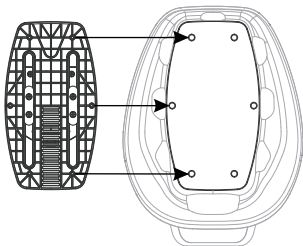



# 售后服务保障卡



请仔细阅读本售后服务保障卡，如不能接受，请及时联系经销商退换货，安装并使用即表示接受此售后服务条款。

## 售后服务条款

1. 1年免费保修期，此款产品自售出之日起1年内，在正常情况下出现质量问题可享受免费维修服务。
2. 有限保修：1年保修时间到期后，LOBOO将提供有偿保修服务，费用以实际更换材料费用为准，不另收取人工费用。

## 免费保修服务不包括以下内容

1. 无保修卡或不能提供有效购买凭证。
2. 安装、使用不当、人为或意外损坏、自行拆解、自行改装和维修等。

## 退换货信息

平台ID: \_\_\_\_\_ 订单编号: \_\_\_\_\_

联系人姓名: \_\_\_\_\_ 联系人电话: \_\_\_\_\_

回寄地址: \_\_\_\_\_

## 售后事项

请妥善保管好此卡并与产品一起寄回（复印件有效）